

Infinity Iyashi Massage Chair Installation Guide

For best results, please follow these instructions in order.

A. Attaching the speakers/shoulder airbags.

A1. Plug in the speaker cable into the port on the chair as shown below. Note: the connector will click into place. If it does not click, it may be in upside down. Turn over and try again.



A2. Note when installing the speaker onto the chair there are 2 air holes on each speaker that will mate with air outlets on the chair. Carefully place the speaker so that they meet up and insert.



A3. Screw in 3 provided screws into the holes shown below.



Infinity Iyashi Massage Chair Installation Guide

B. Attaching the armrests and arm airbags.

B1. Carefully lift the armrest with the airbag side away from you and move over to the main chair.



B2. Make sure the armrest part with screw access hole is placed over the metal bracket as shown below and gently ease the armrest onto the chair.




Infinity Iyashi Massage Chair Installation Guide

B3. Insert the long screw with washer into the hole in the armrest as shown below. Screw in till snug.




B4. Carefully insert screw with washer into the square hole shown below. You may need to move the hip airbag out of the way to see the hole.

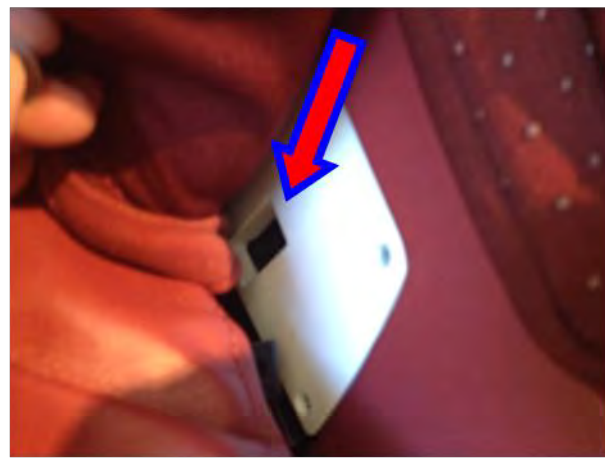

Infinity Iyashi Massage Chair Installation Guide

B5. Plug in the black and red electrical connectors to their color coded receivers on the chair. Push in until they click in place. Attach air hose to air nozzle on chair until fully seated.

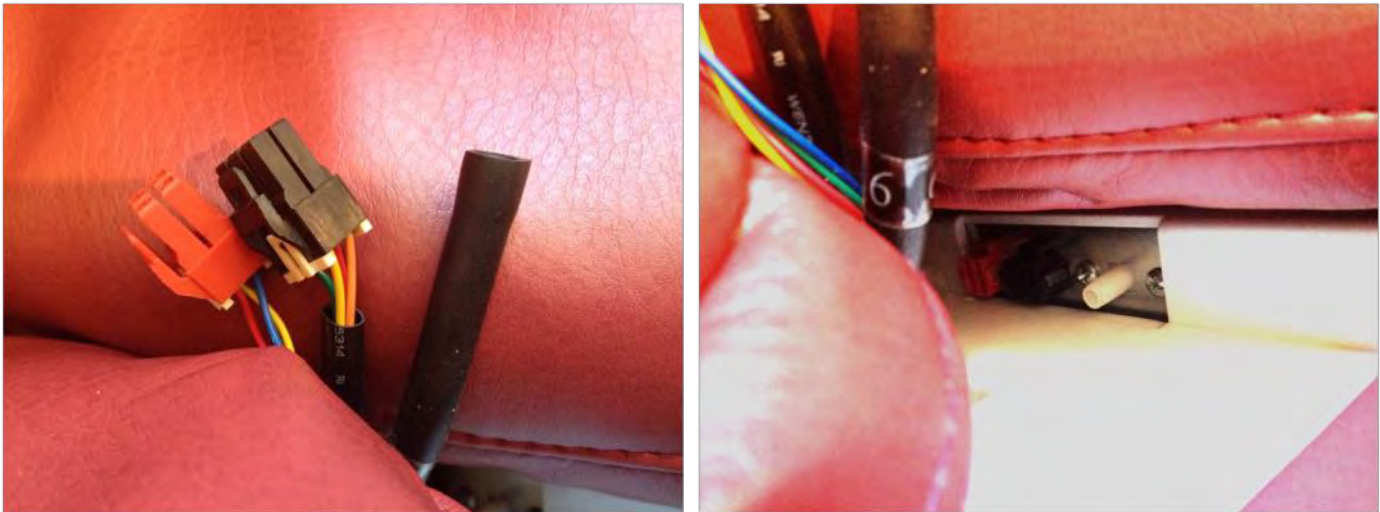



C. Attaching the leg massage unit to the chair.

C1. The leg massage unit is easier to install if the chair is in an upright position. To place the chair in upright position plug the power cord into the chair and attach the remote control to the chair and power on. The chair will then reset into and upright position. Move the leg massage unit close to the front of the chair.




Infinity Iyashi Massage Chair Installation Guide

C2. Plug in the black and red electrical connectors to their color coded receivers on the chair. Push in until they click in place. Attach air hose to air nozzle on chair until fully seated.

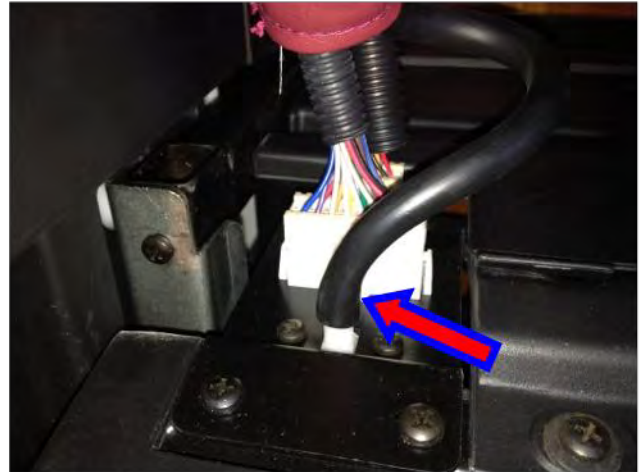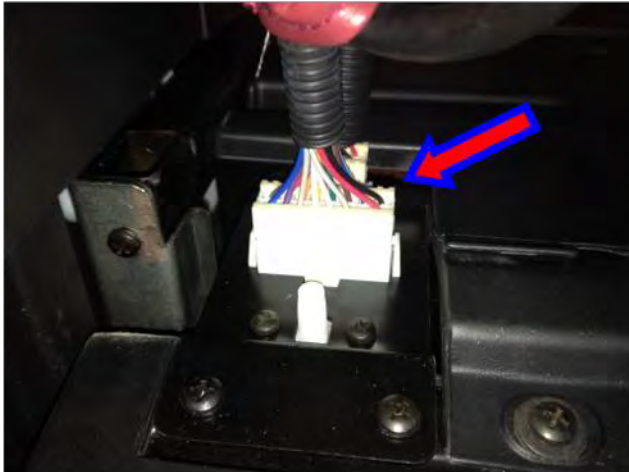

C3. Insert the white vinyl sleeve into the black roller and slide them onto the axles on both sides of the foot massage unit.

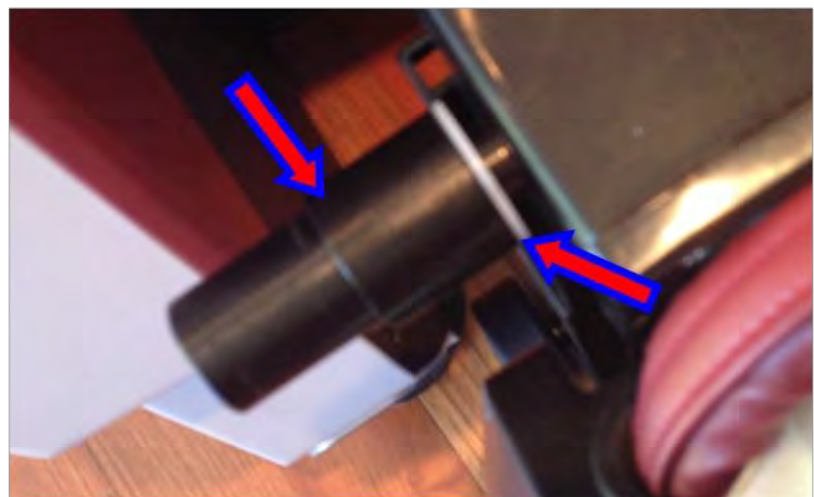


Infinity Iyashi Massage Chair Installation Guide

C4. Make sure the latch is in an open position and lift the legrest axles onto the latch as shown below. Drop the latch into place and fix with provided screw.



C5. Cover the axles with the velcro covers as shown below.

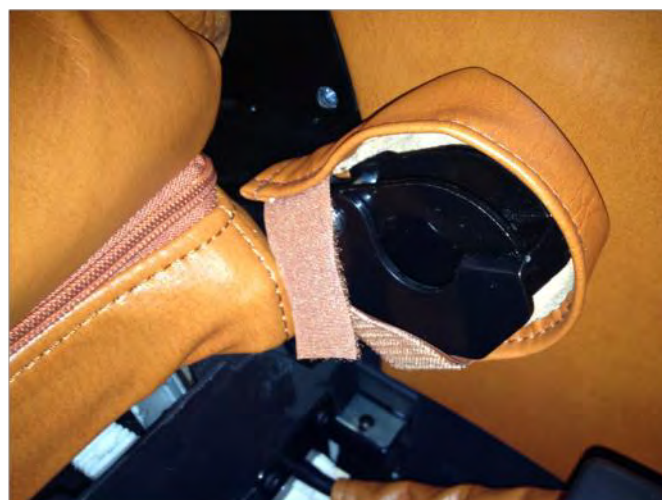

Infinity Iyashi Massage Chair Installation Guide

C5. Zip the pleated cover onto the seat base to cover the axles as shown.



Your Infinity Iyashi is ready for use. Enjoy!